


Connection diagrams

For Types MS116, MS132, MS45x, MS49x

MS Series
Manual motor
protectors

Connection diagrams

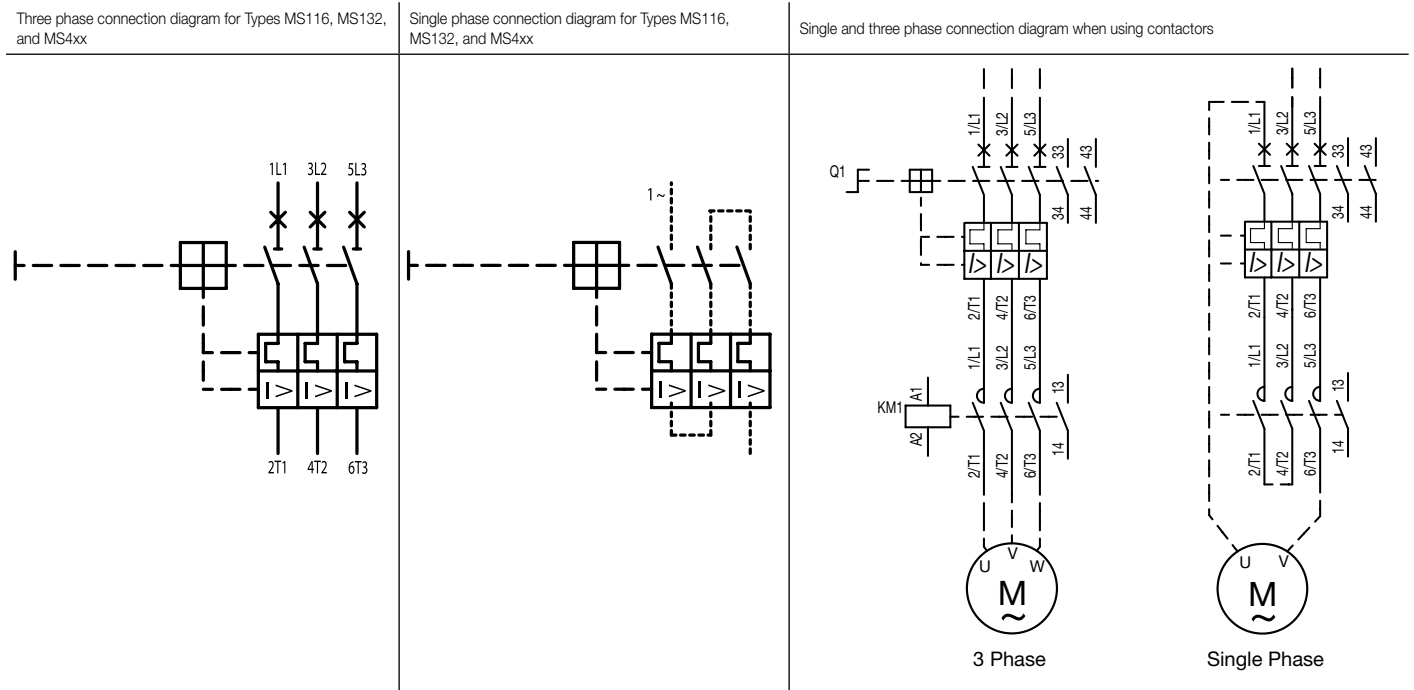

Accessories for use with Type MS116, MS132 & MS4xx

